ORIGINAL INSTRUCTION

SHIRE WORK BOAT YM ENGINE MANUAL

For the following engine models:

Shire 15,20,25,30 WB YM

Addendum to the Yanmar Marine Engines Manual & PRM Owners Handbook / Technodrive Operating Manual

RDG603A24 – Issue 15

SAFETY

E.P. Barrus is concerned for your safety. We use safety statements throughout the manual to call your attention to the potential hazards associated with the operation of your Shire engine.

Follow the precautions listed throughout the manual before operation, during operation and during servicing/maintenance procedures for your safety, the safety of others and to protect the performance of your engine.

Safety alert symbol appears throughout the manual. It means attention, be alert as your safety is involved. Please read and follow the message that appears after the safety alert symbol.

NOTICE:	This indicates a situation which can cause damage to the machine, personal property and/or the environment or cause the equipment to operate improperly
CAUTION:	This indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
WARNING:	This indicates a hazardous situation which, if not avoided, could result in death or serious injury.
DANGER:	This indicates a hazardous situation which, if not avoided, will result in death or serious injury.

Engine Details

Engine Number:	

Please enter your engine serial number in the space provided above. Please quote the engine identification number during any enquiry or when ordering spare parts. Information about the engine serial number and its location on the engine can be found in **SECTION 2** of the manual.

NOTICE:

THIS MANUAL FORMS AN INTEGRAL PART OF THE ENGINE IT ACCOMPANIES, IF A TRANSFER OF TITLE OCCURS, IT MUST ALWAYS BE HANDED OVER TO THE NEW OWNER.

Thank you for purchasing this Shire Work Boat YM Engine from E.P.Barrus. This manual has been compiled to help you to operate your engine and its associated parts with safety and pleasure. Please read it carefully in conjunction with the Yanmar and PRM Gearbox / Technodrive Gearbox Manuals and familiarise yourself with the engine and its parts before operation. The PRM Gearbox Manual is available from the PRM website:

www.prm-newage.com

The information and recommendations given in this manual are based on the latest information available at the time of publication. E.P.Barrus reserve the right to change the specification of its products and manuals without prior notice.

Depending upon the equipment specification of the engine and accessories fitted, there may be discrepancies with the information presented in this handbook. No claims may be pursued in this respect.

WARRANTY

This UK Limited Warranty provides coverage for five (5) years (or 2000 hours whichever occurs first) for recreational users and three (3) years (or 2000 hours whichever occurs first) for commercial users from the date of warranty registration. The warranty is for non-serviceable items. The repair or replacement of parts, or the performance of service under this warranty, does not extend the life of this warranty beyond its original expiry date.

To ensure that you have been registered for your warranty, please ask your Boat Builder or Engine Supplier to provide your portion of the registration form.

The Warranty will only apply if the following have been carried out:

1) The Installation Check List in the Installation Section has been fully completed.
2) The boat builder or engine installer has completed the Boat Builder Section on the Service Record Card (located at the back of this manual) regarding hand over and commissioning of boat.

E.P Barrus staff or their representatives can only carry out warranty repairs if there is suitable access and room around the engine to work safely.

Failure to complete and return the registration form to E.P Barrus will result in the warranty period starting from the date of engine manufacture <u>NOT</u> from the date of purchase.

PRM Gearboxes are covered by a three (3) year warranty for recreation users and two (2) years for commercial users.

Technodrive Gearboxes are covered by a two (2) year warranty for recreation users and one (1) year for commercial users.

Engine alternator, starter motor and electrical components are only covered by a one (1) year warranty.

CONDITIONS THAT MUST BE MET IN ORDER TO OBTAIN WARRANTY COVERAGE

Warranty coverage is only available from an authorised dealer in the country in which the sale occurred. Routine maintenance outlined in the Owner's Manual must be performed using genuine parts in order to maintain warranty coverage. If the customer performs maintenance, Barrus reserves the right to make future warranty coverage possible only with proof of proper maintenance.

WARRANTY CLAIMS

Warranty claims shall be made by an authorised dealer or boat builder.

The dealer or boat builder will then arrange for the inspection and any necessary repairs. If the repairs carried out are not covered by the warranty, the purchaser shall pay for all related labour and material, and any other expenses associated with that service.

WHAT IS NOT COVERED

This limited warranty does not cover routine maintenance items, adjustments, normal wear and tear, damage caused by abnormal use, operation of the product in a manner inconsistent with the recommended operation/duty cycle section of the Owner's Manual, accident, submersion, improper installation (proper installation specification and techniques are set forth in the Operations and First time running sections in this manual), use of an accessory or part not manufactured or sold by us, or alteration or removal of parts. Expenses related to crane-out, launch, towing, storage, telephone, rental, inconvenience, slip fees, insurance coverage, loan payments, loss of time, loss of income, or any other types of accidental or consequential damages are not covered by this warranty.

Engine and fuel equipment is not covered by warranty if bio-diesel is used in the fuel system. Also if no type of water trap is incorporated into the fuel system.

Index

Page

SECTION 1 – Safety Precautions 9

1. General 9
2. Lifting 9
3. Rotating Shafts and Belts 9
4. Exhaust System 10
5. Launching and Lifting Boats 10
6. Batteries 10

SECTION 2 – Engine Identification 12

SECTION 3 – Component Identification 13

1. Shire 15 Work Boat YM 13
2. Shire 20 Work Boat YM 14
3. Shire 25 Work Boat YM 15
4. Shire 30 Work Boat YM 16
5. Shire 30 Work Boat M YM 17
6. Engine Mounts 18

SECTION 4 – Control Panel 19

1. Basic Control Panel 19
2. Standard Control Panel 19
3. Deluxe Control Panel 20
4. Control Panel Overview 20
5. Warning Light Procedure 20
6. Overall Dimensions of the Basic Control Panel 23
7. Overall Dimensions of the Standard Control Panel 23
8. Overall Dimensions of the Deluxe Control Panel 24

SECTION 5 – Operation 25

1. Starting the engine for the first time 25
2. Starting Procedure 25
3. Stopping Procedure 26

4. Diesel Fuel Additive 26
5. Single Shift Control Lever Side Mount Operation - Optional (RDG9210055) 26
SECTION 6 – Service Procedure 27
1. Engine Oil and Filter Change 27
2. Gearbox Oil Change 27
3. Disposal of Oil and Related Items 30
4. Primary Fuel Filter Drain 30
5. Primary Fuel Filter Change 31
6. Control Panel Maintenance 32
SECTION 7 – Service Schedule 33
1. Specifications and Capacities 33
2. Service Intervals 34
SECTION 8 – Wiring Diagrams 35
1. Shire to Yanmar Extension Loom 35
2. Basic Control Panel Wiring Diagram 36
3. Standard Control Panel Wiring Diagram 37
4. Deluxe Control Panel Wiring Diagram 38
SECTION 9 – Technical Data 39
1. Dry Weight of Engine Data 39
SECTION 10 – Dealer List 40
SECTION 11 – Shire Parts 42
SECTION 12 – Shire Service Record Card 44

SECTION 1 – Safety Precautions

1. General

NOTICE:

NEVER PERMIT ANYONE TO OPERATE THE ENGINE WITHOUT PROPER TRAINING.

It is the responsibility of the installer/operator to ensure that the finished installation complies with CE Marking, the relevant Health & Safety requirements and the recreational craft directive before commissioning.

Ensure that the engine battery isolator switch is in the off position and the key removed from the control panel before carrying out any maintenance or repairs.

2. Lifting

DANGER:

CRUSH HAZARD! NEVER STAND UNDER A HOISTED ENGINE. IF THE HOIST MECHANISM FAILS, THE ENGINE WILL FALL ON YOU, CAUSING SERIOUS INJURY OR DEATH.

The Lifting points supplied with the engine are for lifting the engine/gearbox only. A suitable spreader bar must be employed to prevent over-stressing either bracket during any lift.

3. Rotating Shafts and Belts

WARNING:

SEVERE HAZARD! KEEP HANDS AND OTHER BODY PARTS AWAY FROM MOVING/ROTATING PARTS. WEAR TIGHT FITTING CLOTHING AND KEEP YOUR HAIR SHORT OR TIE BACK. REMOVE ALL JEWELLERY BEFORE COMMENCING WORK. CHECK BEFORE STARTING THE ENGINE THAT ANY TOOLS OR RAGS USED DURING MAINTENANCE HAVE BEEN REMOVED FROM THE AREA.

The engine and its accessories are not intended to be put into operation until they are integrated into the boat as a whole. No person should be in the engine compartment and the engine cover or deck hatches should be closed whilst the engine is running.

4. Exhaust System

WARNING:

EXHAUST HAZARD! NEVER OPERATE ENGINE IN A BOATS ENGINE BAY WITHOUT PROPER VENTILATION. NEVER BLOCK VENTS OR OTHER MEANS OF VENTILATION. ALL COMBUSTION ENGINES CREATE CARBON MONOXIDE GAS DURING OPERATION. ACCUMULATION OF THIS GAS COULD CAUSE ILLNESS OR EVEN DEATH.

WARNING:

BURN HAZARD! WAIT UNTIL THE EXHAUST COOLS BEFORE YOU TOUCH IT.

Exhaust gases may have temperatures as high as 650°C and contain elements which are harmful if ingested.
It is therefore essential that exhaust systems are gas tight and lagged to prevent accidental burning and inhalation of exhaust gases when inside the boat cabin.

5. Launching and Lifting Boats

Care must be taken when launching or craning new boats into or out of the waterway, so that water does not enter the engine via the exhaust system or air vents. It is recommended that these are blocked temporarily whilst undertaking this procedure.

6. Batteries

DANGER:

EXPLOSION HAZARD! NEVER SHORT OUT THE BATTERY TERMINALS, INCLUDING WHEN CHECKING THE REMAINING BATTERY CHARGE THIS WILL RESULT IN A SPARK AND MAY CAUSE AN EXPLOSION OR FIRE.

WARNING:

BURN HAZARD! BATTERIES CONTAIN SULPHURIC ACID. NEVER ALLOW BATTERY FLUID TO COME IN CONTACT WITH SKIN, EYES OR CLOTHING. SEVERE BURNS COULD RESULT. MAKE SURE THE CORRECT PERSONAL PROTECTION EQUIPMENT IS WORN.

- Batteries can produce explosive gases; keep sparks and flames away from the battery.

NO SMOKING

- Batteries contain sulphuric acid; if splashed on skin or eyes, flush well with water and seek medical advice.
- Keep battery tops and battery compartment ventilated at all times
- If disconnecting the battery; remove the earth lead **FIRST**; and re-connect it last.
- If charging the battery; ensure that the charger is switched off before connecting and disconnecting.
- Do not tip the battery on its side.
- Please see label on battery or manufacturer's instructions for specific information.

SECTION 2 – Engine Identification

The engine serial number can be found engraved into the brass plate on the top of the engine rocker cover and stamped to the crankcase next to the starter motor.

An example of the engine identification plate is shown below (**Figure 1**):

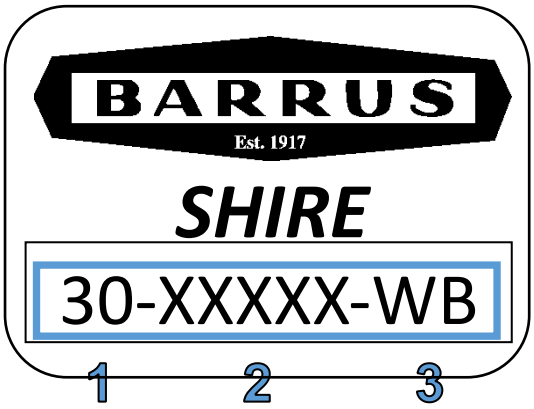

	Description
1	Engine Model
2	Serial Number
3	Indicates Model Type or Optional Extras: WB = Work Boat D = Deluxe Panel 3 = 3:1 Ratio Gearbox

Figure 1: Engine Identification Badge

Description of Models:

Abbreviation	Type of Engine	Description*
WB	Work Boat	Seawater/Heat Exchanger cooled, dry exhaust manifold with either a dry exhaust system (same as a Canal Boat) or water injected exhaust system. Can also be used for sea going applications

***Note**: There are a number of optional extras that may be fitted to an engine that are not listed here.

A list of Shire part numbers can be found in **Section 10**, Shire Parts.

SECTION 3 – Component Identification

1. Shire 15 Work Boat YM

Figure 2: Shire 15 Left Side (Viewed from front)

	Description*
1	Water Pump

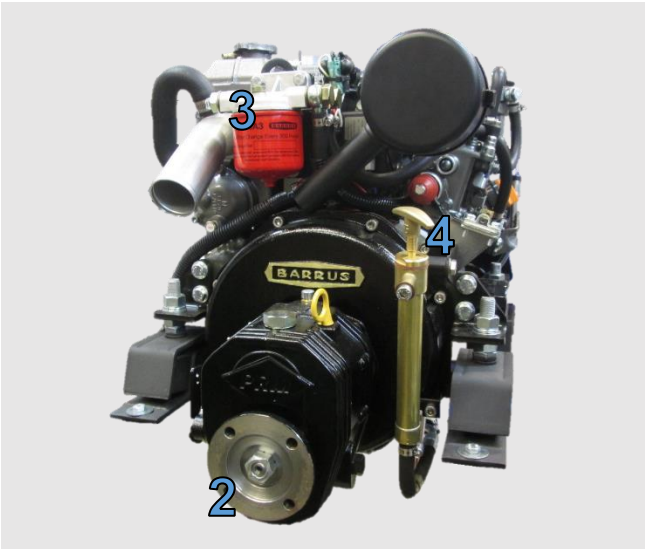

Figure 3: Shire 15 Right Side (Viewed from rear)

	Description*
2	Gearbox
3	Primary Fuel Filter
4	Engine Sump Pump

***Note**: There are a number of optional extras that may be fitted to an engine that are not shown here.

2. Shire 20 Work Boat YM

Figure 4: Shire 20 Left Side (Viewed from front)

	Description*
1	Water Pump

Figure 5: Shire 20 Right Side (Viewed from rear)

	Description*
2	Gearbox
3	Primary Fuel Filter
4	Engine Sump Pump

***Note**: There are a number of optional extras that may be fitted to an engine that are not shown here.

3. Shire 25 Work Boat YM

Figure 6: Shire 25 Left Side (Viewed from front)

	Description*
1	Water Pump

Figure 7: Shire 25 Right Side (Viewed from rear)

	Description*
2	Gearbox
3	Primary Fuel Filter
4	Engine Sump Pump

***Note**: There are a number of optional extras that may be fitted to an engine that are not shown here.

4. Shire 30 Work Boat YM

Figure 8: Shire 30 Left Side (Viewed from front)

	Description*
1	Water Pump

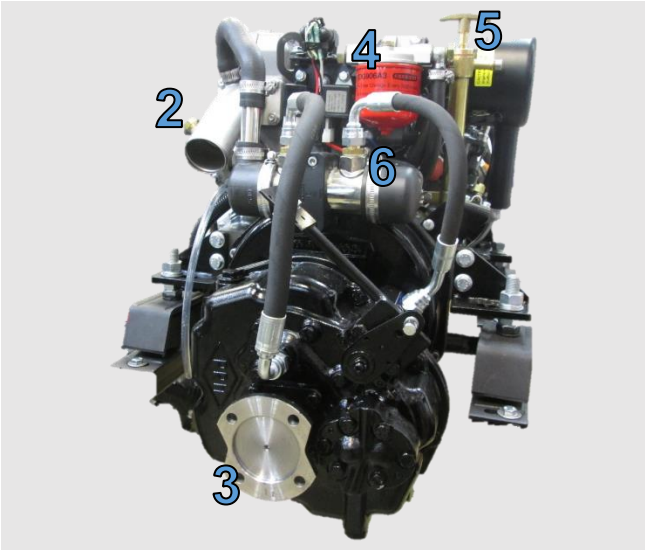

Figure 9: Shire 30 Right Side (Viewed from rear)

	Description*
2	Zinc Anode
3	Gearbox
4	Primary Fuel Filter
5	Engine Sump Pump
6	Oil Cooler

***Note**: There are a number of optional extras that may be fitted to an engine that are not shown here.

5. Shire 30 Work Boat M YM

Figure 10: Shire 30 M Left Side (Viewed from front)

	Description*
1	Water Pump

Figure 11: Shire 30 M Right Side (Viewed from rear)

	Description*
2	Gearbox
3	Primary Fuel Filter
4	Engine Sump Pump

***Note**: There are a number of optional extras that may be fitted to an engine that are not shown here.

6. Engine Mounts

There are two different types of engine mounts fitted to the engine. The engine mounts fitted to the front and the rear of the engine have different numbers stamped on them. The front mounts have a 100 stamped on them and the rear mounts have a 75 stamped on them. The mounts should not be changed front to rear or rear to front as they are designed to carry different loads.

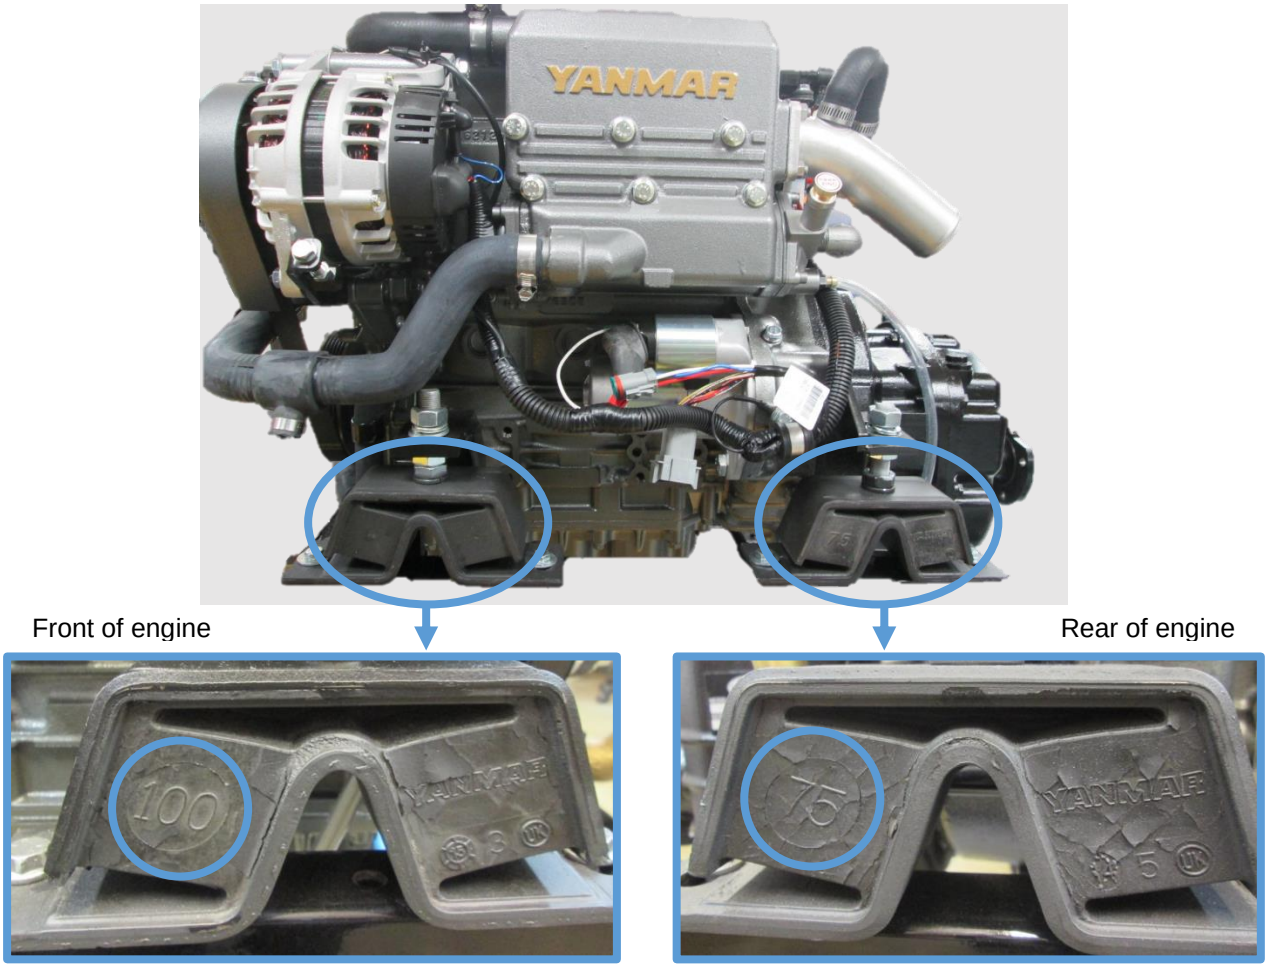

Figure 12: Engine Mounts

SECTION 4 – Control Panel

1. Basic Control Panel

Figure 13: Basic Control Panel

	Description
3	Water Temperature Warning Light
4	Oil Pressure Warning Light
5	Alternator Charge Warning Light
6	Glow Plug Light
7	Heat Start Button
8	Key Flap and Ignition Switch
9	Stop Button

2. Standard Control Panel

Figure 14: Standard Control Panel

	Description
1	Tachometer Gauge
2	Hour Meter
3	Water Temperature Warning Light
4	Oil Pressure Warning Light
5	Alternator Charge Warning Light
6	Glow Plug Light
7	Heat Start Button
8	Key Flap and Ignition Switch
9	Stop Button

3. Deluxe Control Panel

Figure 15: Deluxe Control Panel

	Description
1	Tachometer Gauge
2	Hour Meter
3	Water Temperature Warning Light
4	Oil Pressure Warning Light
5	50A Alternator Charge Warning Light
6	Glow Plug Light
7	Heat Start Button
8	Key Flap and Ignition Switch
9	Stop Button
10	50A Alternator Output Gauge
11	Oil Pressure Gauge
12	Water Temperature Gauge

4. Control Panel Overview

- The Shire Work Boat YM engine are supplied with a standard control panel. Please note that a deluxe control panel can be ordered as an option.
- The control panel is splash proof but is **NOT** fully water proof. The control panel needs to be installed in a position where it is protected from water.

5. Warning Light Procedure

- When the ignition is first turned on, the control panel warning lights will come on as a bulb check. When the engine is started the warning lights will go out. Please note that the water temperature warning light and glow plug light operate slightly differently.

- The water temperature warning light will only come on for a brief period of time when the ignition is first turned on as a bulb check. It will then only illuminate in the case of the engine coolant temperature exceeding the maximum safety level.

- The glow plug light will come on when the ignition is first turned on for 5 – 8 seconds to indicate the heating system is operational. When the light goes out the engine can be started.

- Whilst the control panel is in operation all the gauges are backlit. This does not indicate a fault and is a normal function for the control panel.

- If any of the warning lights on the control panel come on **whilst** the engine is running, please follow the correct procedure as shown in the following table.

In the event of a fault, only trained and qualified personnel should undertake repairs on the engine

	Description	Procedure for Warning Light
1	Tachometer Gauge	-
2	Hour Meter	-
3	Water Temperature Warning Light	Reduce the engine revs and stop the engine within one or two minutes. Check the coolant level (refer to Yanmar Marine Engine Manual). If the coolant level is incorrect, fill it to the correct level (refer to Yanmar Marine Engine Manual) and restart the engine. If the coolant level is correct and the fault is still present, or there is a coolant leak, please contact your local dealer.
4	Oil Pressure Warning Light	Stop the engine immediately. Contact your local dealer. Failure to stop the engine may result in permanent engine damage.
5	Alternator Charge Warning Light	This indicates that the alternator has stopped charging. The engine can still be operated for a short period of time. Contact your local dealer.
6	Glow Plug Light	This indicates that the cold start system is operating. If the light fails to illuminate during the starting procedure contact your local dealer.
7	Heat Start Button	When operated the button will cause the glow plug light to illuminate - This is a normal function of the panel.
8	Key Flap and Ignition Switch	-
9	Stop Button	-
10	Oil Pressure Gauge	-
11	Water Temperature Gauge	-

*Only applicable if fitted to the engine

6. Overall Dimensions of the Basic Control Panel

(All Dimensions are in mm)

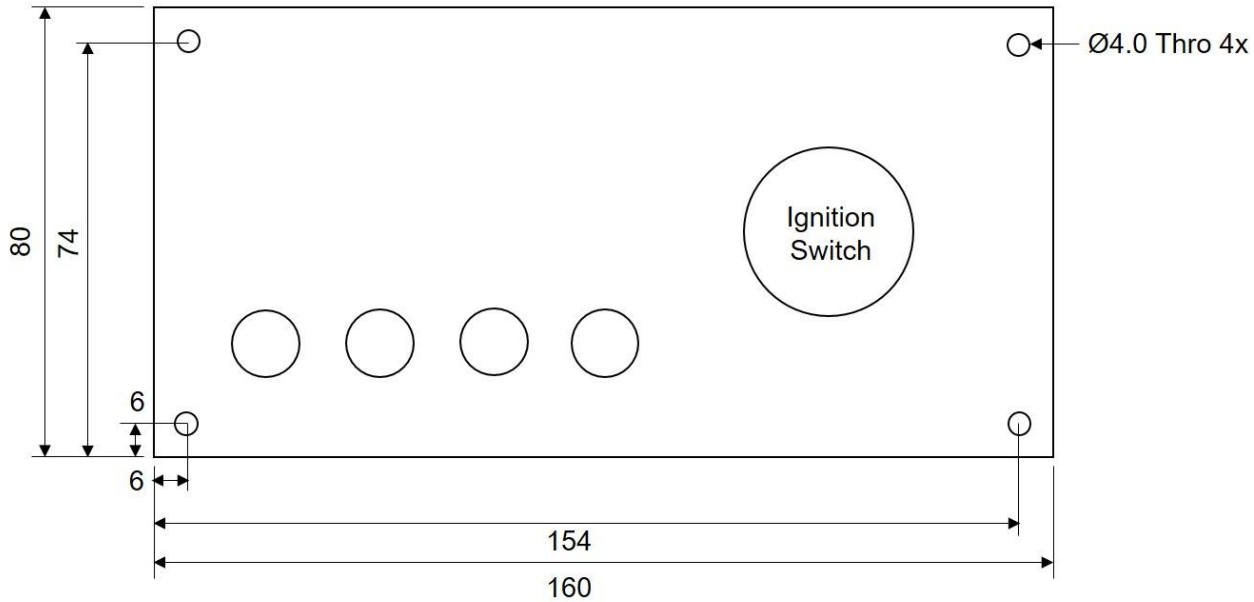

Figure 16: Basic Control Panel Dimensions

7. Overall Dimensions of the Standard Control Panel

(All Dimensions are in mm)

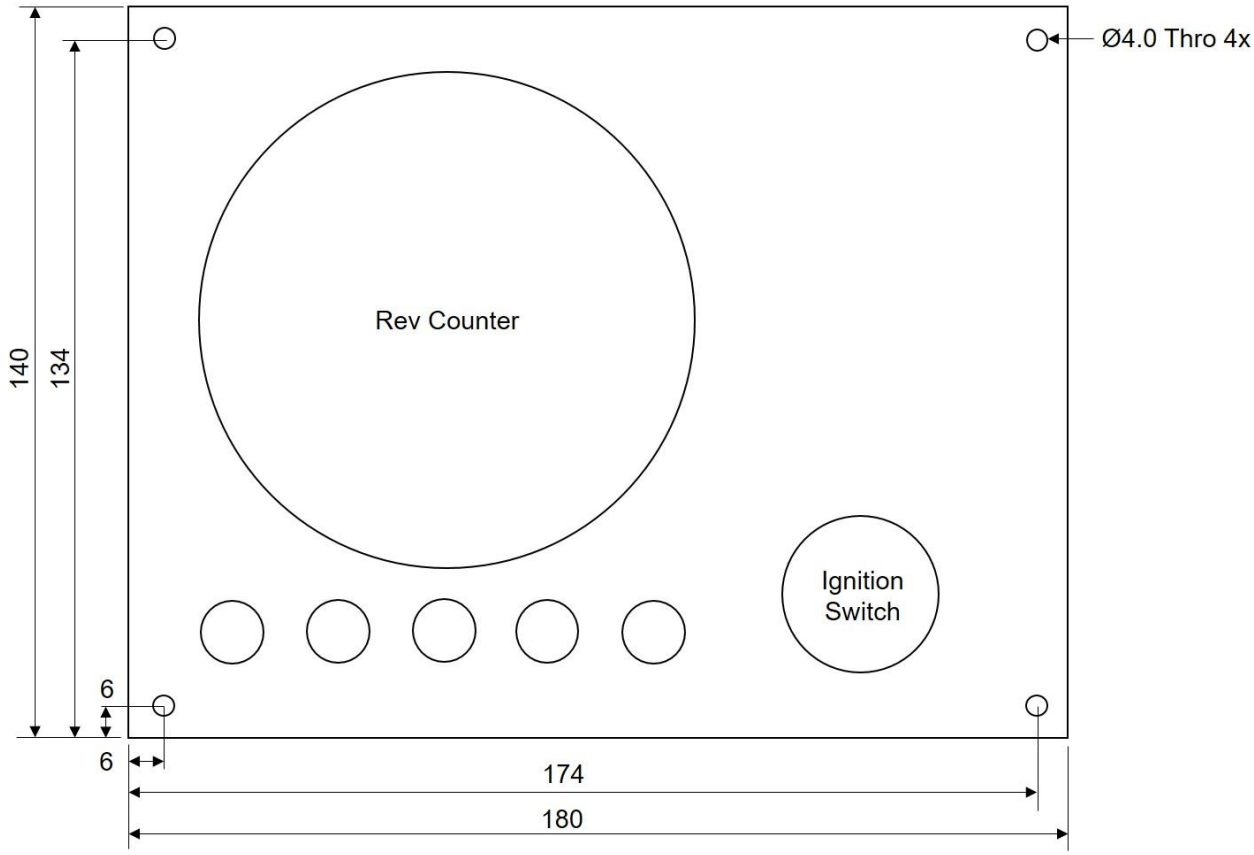

Figure 17: Standard Control Panel Dimensions

8. Overall Dimensions of the Deluxe Control Panel

(All Dimensions are in mm)

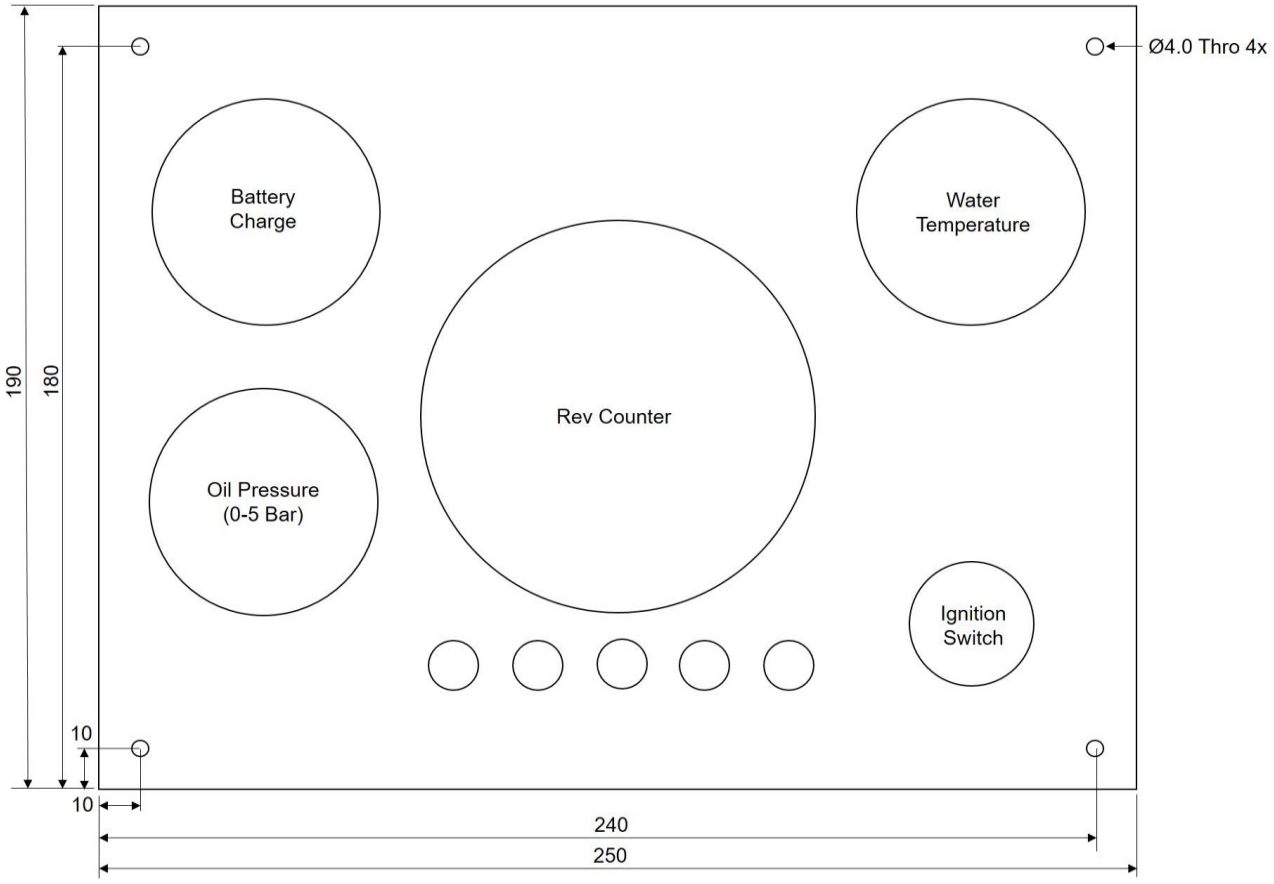

Figure 18: Deluxe Control Panel Dimensions

SECTION 5 – Operation

NOTICE:

REFER TO THE YANMAR MANUAL PRIOR TO STARTING THE ENGINE.

1. Starting the engine for the first time

- Remove ignition key.
- Ensure all oil and coolant levels are checked.
- Ensure both the engine and domestic batteries are connected. All battery master switches must be turned on. Failure to do so may damage the domestic alternator.
- Ensure that the raw water seacock is turned on.

2. Starting Procedure

- Ensure there is no one in the engine compartment.
- Ensure the engine compartment door is closed.
- Ensure the gearshift control level is set to neutral and that all persons are clear of any moving parts.
- Insert ignition key.
- Turn key to on position.
- Press the heat start button for 10 seconds, the glow plug light will illuminate.
- Observe warning lights (and gauges on deluxe panel). Note: The engine water temperature overheat warning light will only come on for a brief period of time when the ignition is first turned on as a bulb check. It will then only illuminate in the case of the engine coolant temperature exceeding the maximum safety level.
- Turn key to start and hold to crank.
- Crank the engine for no more than 15 seconds.
- Upon engine start, immediately release the key.
- Key will return to on position.
- The warning buzzer will stop and on the deluxe panel, the oil pressure gauge will show an oil pressure of 3.5 - 4.5 bar (51 – 61 psi).
- Should any warning light not go out, or if there is no reading on the oil pressure gauge, the buzzer will continue sounding. In this case, stop the engine immediately and check the relevant system (Note: If the charge light does not go out, briefly increase the engine speed).
- Once started check that sea water is coming out of the water cooled exhaust outlet in the hull of the boat.

- Stop engine if any abnormal noises are detected.
- Visually check the engine for oil, fuel and coolant leaks, after initial start-up and at regular intervals. Note: Engine must be stopped to carry out this check).

3. Stopping Procedure

- Move speed control lever to idle position.
- Press the stop button
- Turn key to off position.

4. Diesel Fuel Additive

The use of diesel fuel additive is strongly recommended on Shire engines. The quality of the fuel available when cruising is often unknown. Also the fuel may have been in storage for long periods of time. The use of additives will ensure that your engine fuel injection system is in top condition which should result in many years of smooth reliable operation, without the cost and inconvenience of expensive breakdowns due to poor quality fuel. It has also been found that improvements in fuel consumption and start ability are an added benefit of using this product. Diesel fuel additive is available from your Shire dealer in a handy 500ml container, Part Number RDG80210219.

5. Single Shift Control Lever Side Mount Operation - Optional (RDG9210055)

To engage forward or reverse gear:

- Lift the safety latch under the handle before shifting.

To rev the engine in neutral:

- Pull the lever out sideways from the main body.
- Lift the safety latch under the handle then shift.

SECTION 6 – Service Procedure

NOTICE:

REFER TO THE YANMAR MANUAL PRIOR TO CARRYING OUT ANY SERVICE OR MAINTENANCE WORK.

WARNING:

PRIOR TO CARRYING OUT ANY SERVICE OR MAINTENANCE WORK MAKE SURE THE RELEVANT PERSONAL PROTECTION EQUIPMENT IS WORN.

1. Engine Oil and Filter Change

WARNING:

BURN HAZARD! WAIT UNTIL THE ENGINE COOLS SLIGHTLY BEFORE YOU DRAIN THE ENGINE OIL. HOT ENGINE OIL MAY SPLASH AND BURN YOU.

- Change the engine oil while the engine is still warm.
- Remove the blanking plug in the sump pump spout (6mm Allen key).
- Place a plastic tube over the spout and into a container. Operate the pump handle to empty the sump. Note: Remember to refit the blanking plug afterwards.
- To replace the engine oil and filter please follow the procedure as specified in the Yanmar Marine Engine Manual.

2. Gearbox Oil Change

WARNING:

BURN HAZARD! WAIT UNTIL THE GEARBOX COOLS SLIGHTLY BEFORE YOU DRAIN THE GEARBOX OIL. HOT OIL MAY SPLASH AND BURN YOU.

- Change the gearbox oil while it is still warm (Please refer to the gearbox manual for more information).
- Place a tray beneath the gearbox that will hold at least 2 litres.
- Remove the drain plug and allow 5 minutes for the oil to drain thoroughly.
- Replace the drain plug. Ensure that the sealing washer (if used) is still in place and in good condition before tightening. Fit a new washer if required.
- Refill the gearbox with oil to the upper mark on the dipstick. Screw the dipstick in fully, to establish level. For a PRM Gearbox, refer to the PRM owner manual for more details. Page 6 in this manual contains details of oil specifications. For the Technodrive Gearbox, refer to the Technodrive operating manual for more details. Page 29 in this manual contains details of oil specifications.
- Do not overfill the gearbox as this can damage the internal components.

Gearbox Model	Location of Dipstick / Filler Plug / Drain Plug
PRM 60	
PRM 90	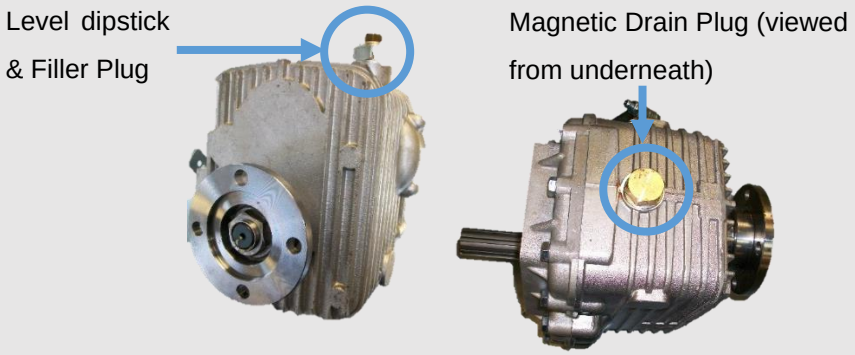
PRM 150	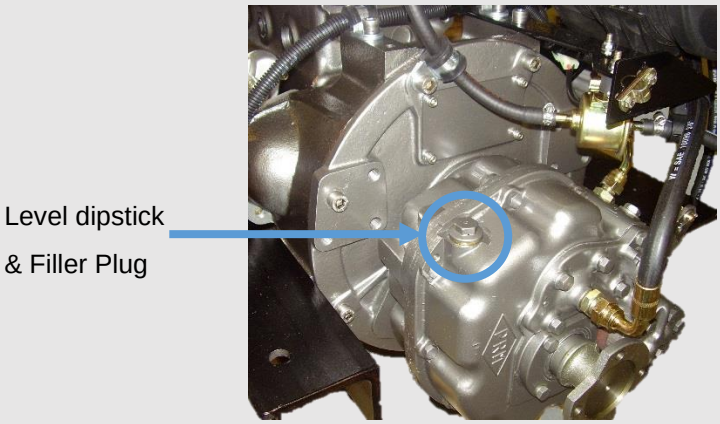
TMC 60A	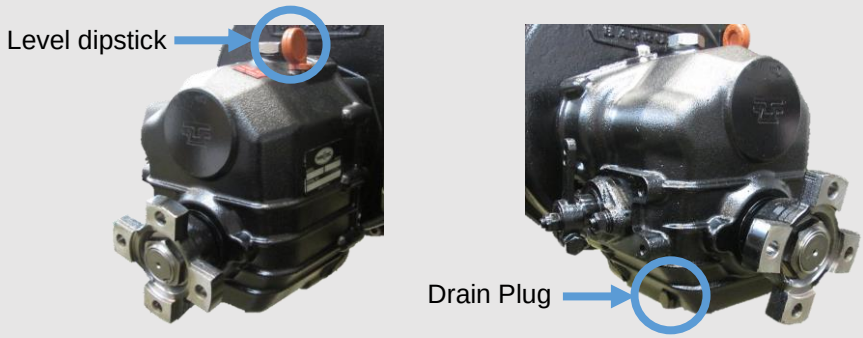

Figure 19: Location of Dipstick / Filler Plug / Drain Plug on Gearbox

3. Disposal of Oil and Related Items

NOTICE:
ALWAYS BE ENVIRONMENTALLY RESPONSIBLE.

- Please dispose of used oil and oil filters safely with due regard for the environment and take to your local waste oil disposal point.
- Do not allow oil or contaminated parts to enter the inland water way system.

4. Primary Fuel Filter Drain

WARNING:
DIESEL FUEL IS FLAMMABLE AND EXPLOSIVE UNDER CERTAIN CONDITIONS.

WARNING:
DIESEL FUEL IS HARMFUL TO SKIN. MAKE SURE THE RELEVANT PERSONAL PROTECTION EQUIPMENT IS WORN.

- Place a small drain bowl under the primary fuel filter / water trap.
- Loosen the drain screw located in the bottom of the fuel filter / water trap (**Figure 20**)
- Drain off any water.
- Once the water has been drained, retighten the drain screw.
- It is unlikely the complete fuel system will require bleeding.
- Run for 5 minutes.
- Check that the drain union is tight and that there are no leaks.
- Do not over tighten the drain screw.

The boat builder should have fitted an additional water trap in the fuel system. Ensure that this is drained regularly.

Figure 20: Primary Fuel Filter Drain Screw

5. Primary Fuel Filter Change

DANGER:

DIESEL FUEL IS FLAMMABLE AND EXPLOSIVE UNDER CERTAIN CONDITIONS.

WARNING:

DIESEL FUEL IS HARMFUL TO SKIN. MAKE SURE THE RELEVANT PERSONAL PROTECTION EQUIPMENT IS WORN.

- Ensure the fuel tank is at least ¾ full prior to undertaking this procedure.
- Turn off the main boat fuel supply tap. This is located on or near the fuel tank.
- Place a small drip tray under the filter body.
- Remove the fuel filter using a filter strap wrench. Unscrew the filter until loose then remove by hand.
- Smear a small amount of clean fuel on all of the O ring seals that are supplied with the new filter element.
- Screw the new element back into the filter head. Tighten by hand only.
- Turn the main boat fuel supply tap back on.
- Loosen the bleed screw on the top of the filter head. Pump the lift pump until air free fuel comes out. Retighten the bleed screw.
- Ensure the system is correctly bled before attempting to start up.

6. Control Panel Maintenance

WARNING:

REMOVE THE IGNITION KEY BEFORE WORKING IN ENGINE COMPARTMENT.
TURN BATTERY ISOLATION SWITCHES OFF.

- **To replace an illumination bulb:** Release the panel from its mounting. The bulbs are accessible from the rear of the panel. Remove the wires, unscrew the nut and pull out the bulb housing from the panel. Remove the bulb and replace. Refit bulb housing, screw the nut back up and refit the wires.
- **To replace any gauge:** Release the panel from its mounting. The gauges are accessible from the rear of the panel. Unplug the wire connectors, unscrew and pull the gauge out of the panel. Replace the gauge and refit. Reattach the wiring connectors.

Periodically squirt a lubricant into the key switch slot when the key has been removed. A lubricant such as WD40 – with silicon, would be suitable. Other lubricants are available. Then with the battery master switch turned off, operate the key switch a couple of times. This will ensure the lubricant works into the mechanism.

SECTION 7 – Service Schedule

NOTICE:

REFER TO THE YANMAR MANUAL PRIOR TO CARRYING OUT ANY SERVICE OR MAINTENANCE WORK.

WARNING:

PRIOR TO CARRYING OUT ANY SERVICE OR MAINTENANCE WORK MAKE SURE THE RELEVANT PERSONAL PROTECTION EQUIPMENT IS WORN.

1. Specifications and Capacities

Specification of Coolants and Lubricants to use:

Component	Lubricant
PRM 60	ATF (Automatic Transmission Fluid) Oil
PRM 90	ATF (Automatic Transmission Fluid) Oil
PRM 150	Engine Oil
TMC 60A	ATF (Automatic Transmission Fluid) Oil

Gearbox Oil Capacity (Excluding Cooler):

Gearbox	Capacity (Litres)	Capacity (Pints)
PRM 60	0.3	0.52
PRM 90	0.57	1.0
PRM 150	1.4	2.5
TMC 60A	0.6	1.05

2. Service Intervals

	Check	Change	Notes
PRM Gearbox Oil	Weekly (Level)	Every 250 Hours OR 12 Months*	First change after 25 hours
Technodrive Gearbox Oil	Weekly (Level)	Every 500 Hours OR 12 Months*	First change after 30 hours
Diesel Fuel Filter – Primary**	50 hours	At first 50 hour service and then every 500 hours OR 12 Months*	Drain water every 50 hours OR Monthly***
Key Switch	Lubricate	Every 250 hours OR 12 Months*	As per instructions in Section 6 – Control Panel Maintenance
Water Pump Impellor	250 Hours	Every 500 hours OR 12 Months*	Change more frequently if operating in shallow or sandy waters

* Whichever occurs first.

** Only filters which meet the Recreational Craft Directive should be fitted to your engine

*** If large quantities of water are found in the fuel when the filter is drained, increase the frequency of draining.

SECTION 8 – Wiring Diagrams

1. Shire to Yanmar Extension Loom

SHIRE TO YANMAR EXTENSION LOOM

RDG205A29 - ISSUE 2
LENGTH: 3M

Wiring key

BARRUS PLUG NO.	YANMAR PLUG NO.	WIRE COLOUR	CONNECTS TO
1	10	Red	Dash panel live
2	11	Blue	Ignition On
3	9	White	Start trigger
4	6	Orange	Tacho signal
5	7	Blue/Black	Alternator Warning lamp
6	NA		Domestic Alternator warning lamp
7	2	White/Blue	Temperature Warning lamp
8	3	White/Green	Temperature Sender
9	1	Yellow/White	Oil Pressure Warning lamp
10	5	Yellow/Green	Oil Pressure Sender
11	4	Black	Earth
12	12	White/Brown	Stop button
13	8	Red/Black	Glow plug warning lamp

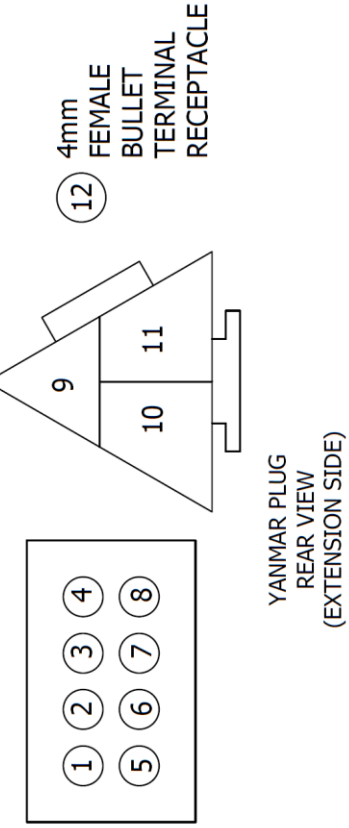

2. Basic Control Panel Wiring Diagram

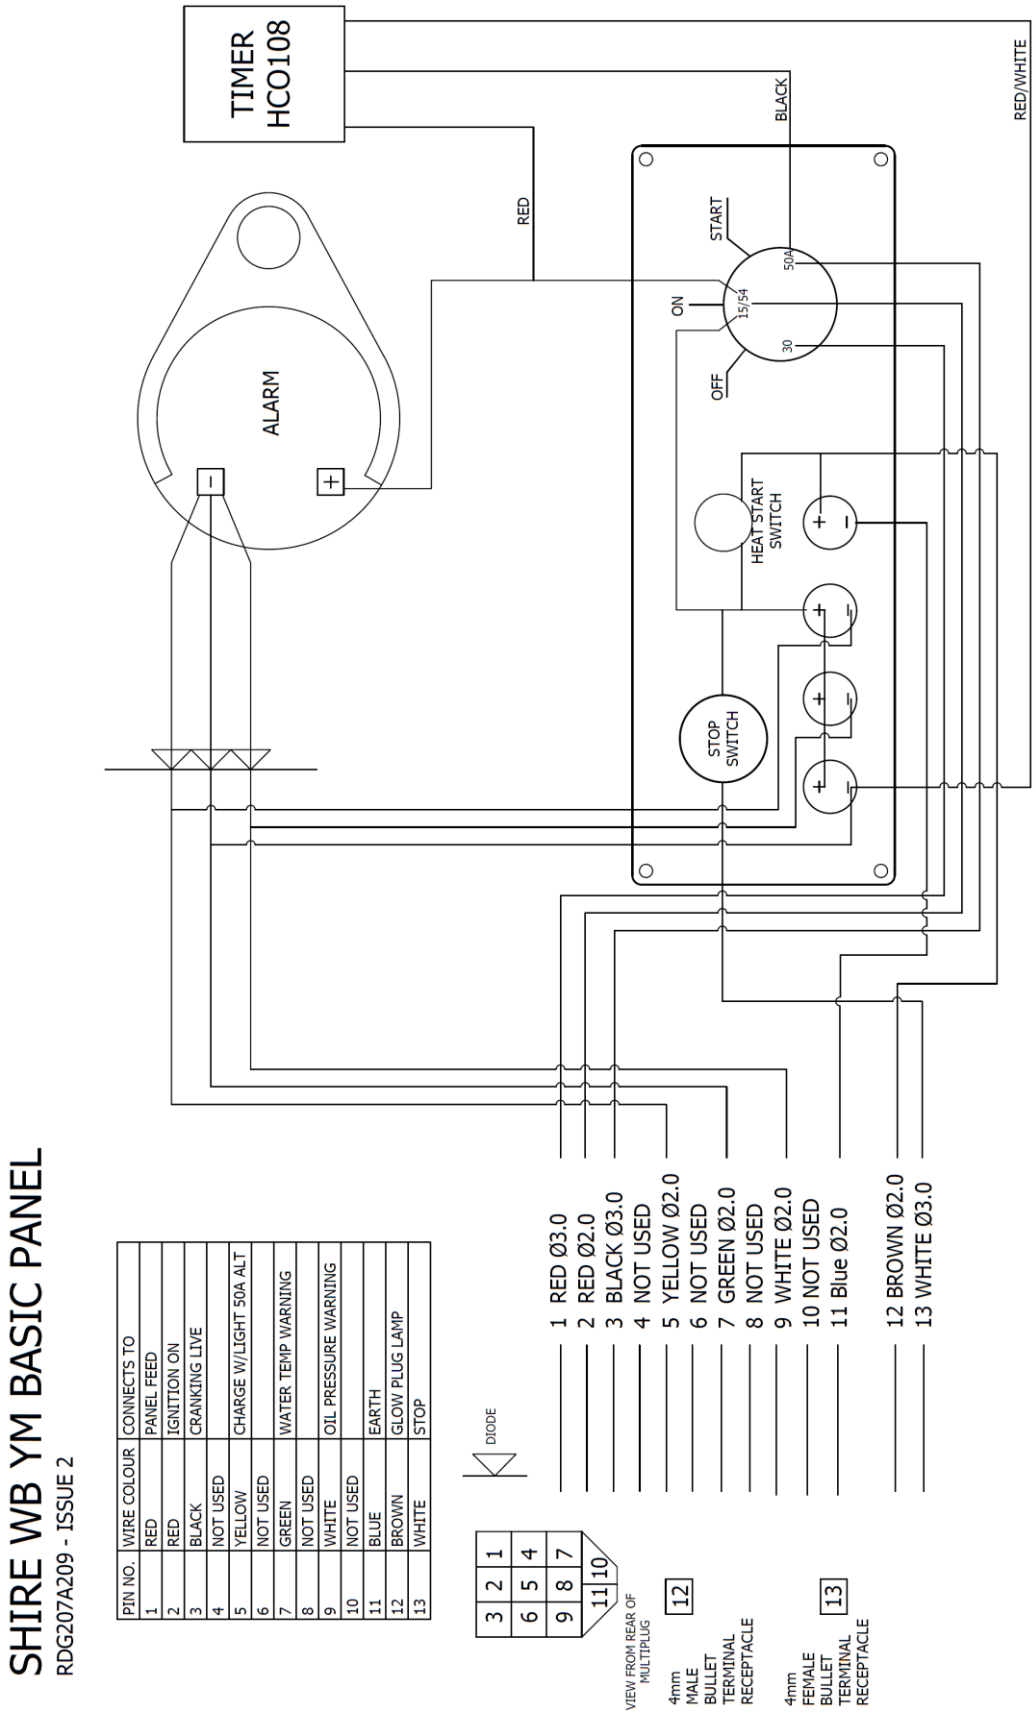

3. Standard Control Panel Wiring Diagram

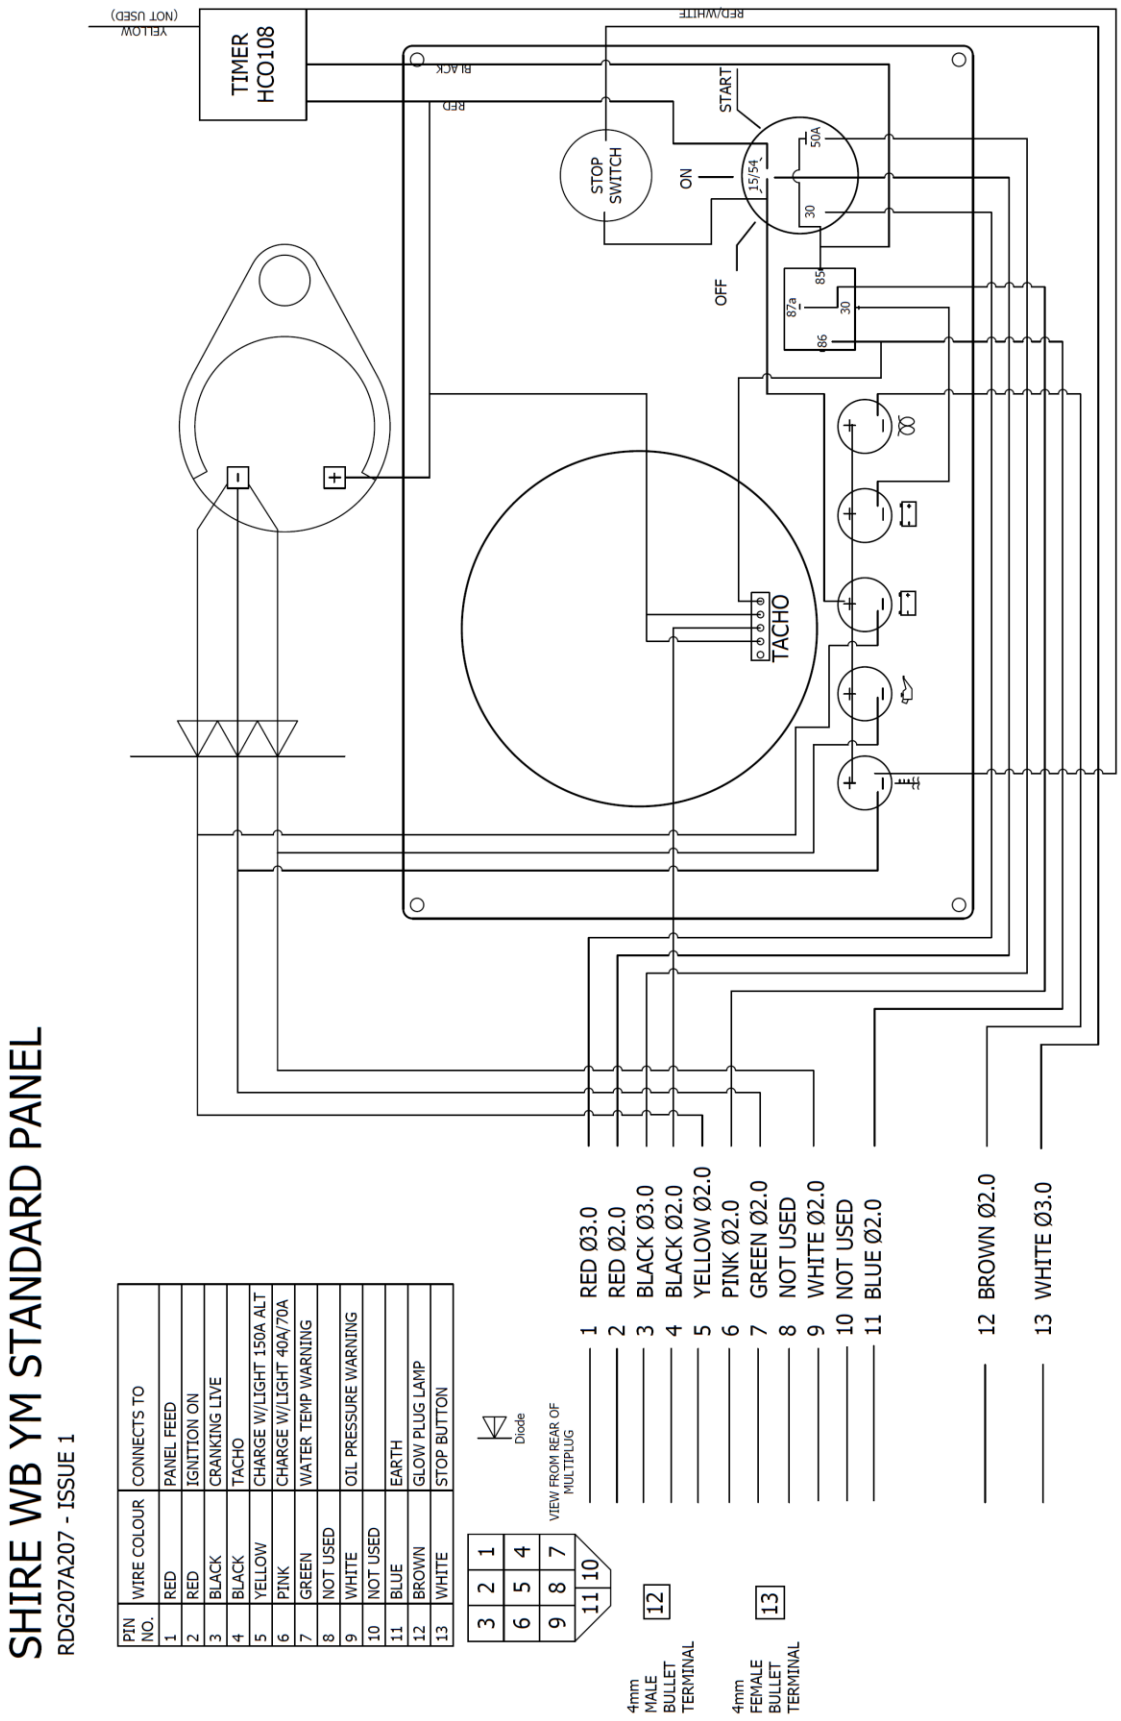

4. Deluxe Control Panel Wiring Diagram

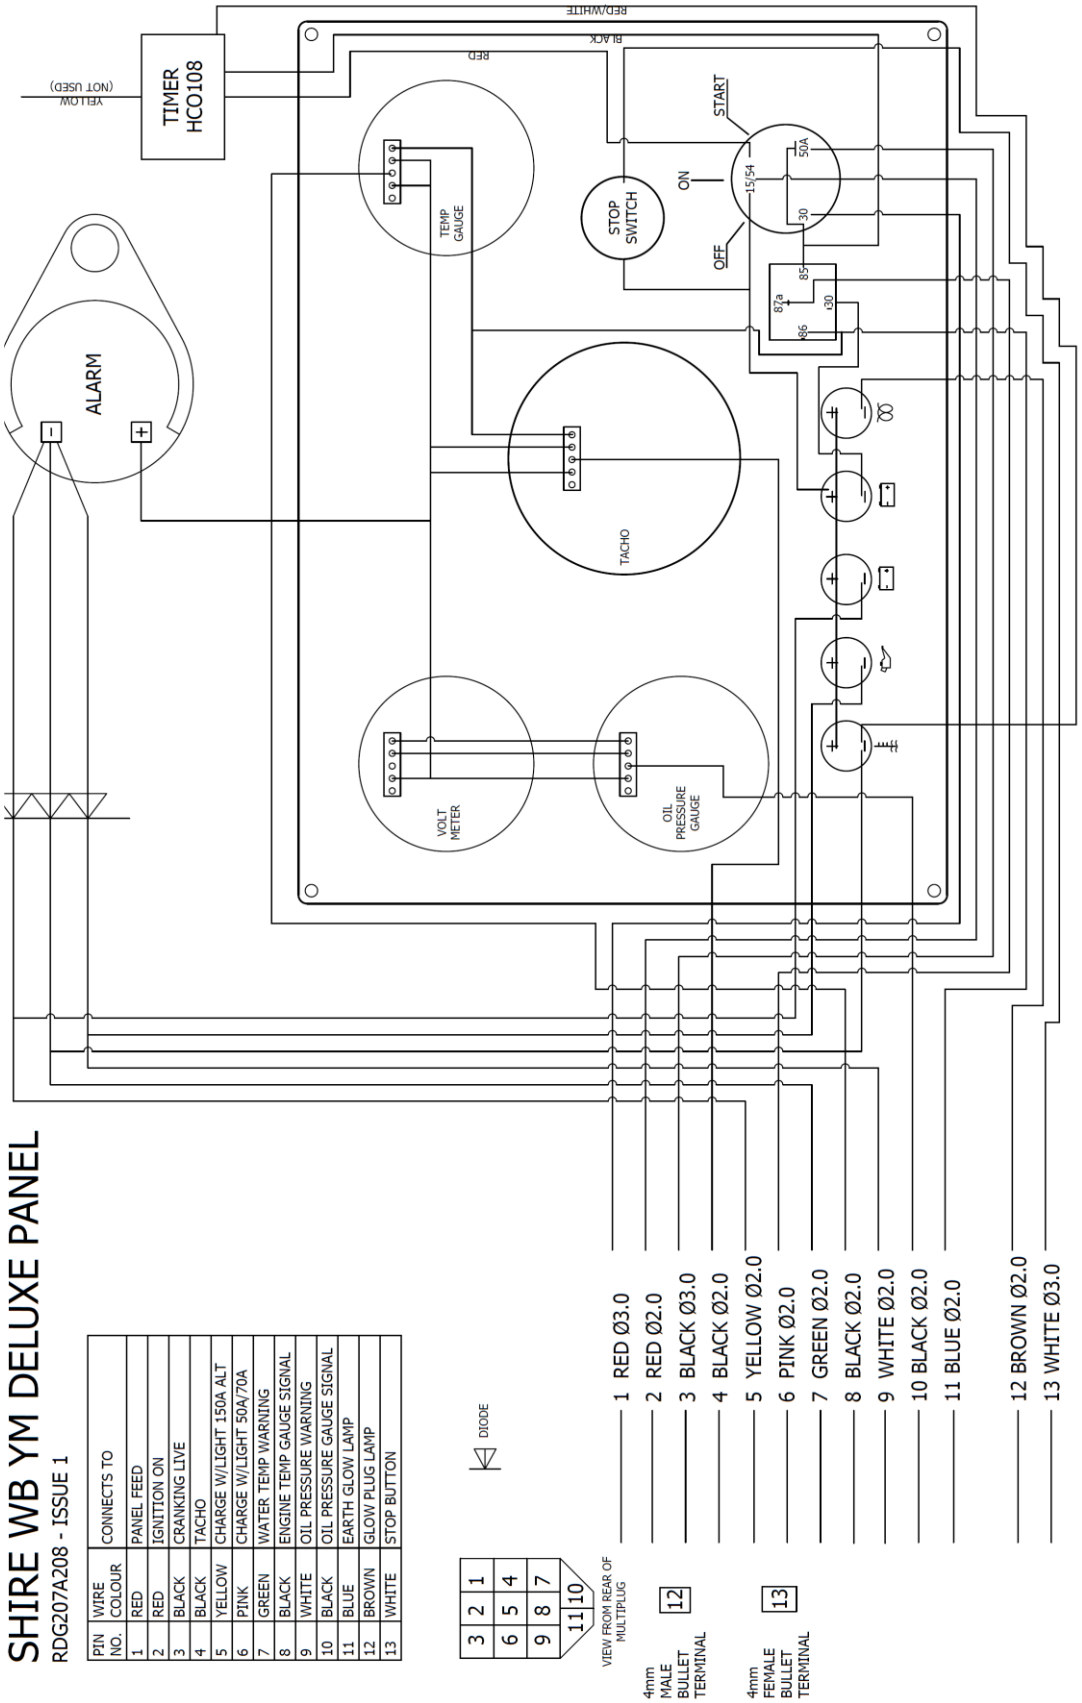

SECTION 9 – Technical Data

1. Dry Weight of Engine Data

Dry Weight of Engine (Including Gearbox)*	
Model	**Dry Weight (kg)**
Shire 15 Work Boat YM	115kg
Shire 20 Work Boat YM	132kg
Shire 25 Work Boat YM	135kg
Shire 30 Work Boat YM	148kg
Shire 30 Work Boat M YM	135kg

* The dry weights stated are for the standard engine in each model range. If a different gearbox or additional alternators are ordered the weight will change accordingly.

SECTION 10 – Dealer List

Area	Company	Telephone	Email
BERKSHIRE	Bluenine Marine	01189 406482	bluenine@marine7957.fsnet.co.uk
	Driveline Marine	0118 942 3877	tam@drivelinemarine.com
	Marcus Marine Engineering Ltd (Servicing, Repairs & Breakdowns only)	07900890911	marcusmarine@icloud.com
CHESHIRE	Nantwich Canal Centre	01270 625122	info@nantwichcc.com
CORNWALL	Black Dog Marine	01503 265898	blackdogmarine@googlemail.com
	Cellar Marine	01326 280214	john@cellarmarine.com
	Smith's Boat Yard	01208 862815	info@smithsboatyard.co.uk
	Armada Engineering	01326 375566	sales@armadamh.co.uk
CUMBRIA	Windermere Aquatic Ltd	01539 442121	service@aquaticboatcentres.com
DERBYSHIRE	Midland Canal Centre	01283 701933	info@mccboats.co.uk
DEVON	Sleeman & Hawken Ltd	01626 778266	keith@sleeman-hawken.co.uk
	Tonto Marine	01803 844399	enquiries@tontomarine.co.uk
	Mobile Marine	01297 631821	mobilemarine@btconnect.com
	Darthaven Marina	01803 752242	admin@darthaven.co.uk
DORSET	Purbeck Marine	01202 686592	purbeckmarine@aol.com
	Rob Perry Marine	01297 631314	sales@robperrymarine.co.uk
EAST SUSSEX	Peter Leonard Marine	01273 515987	info@plmarine.com
ESSEX	French Marine Motors Ltd	01206 305233 01255 850303	info@frenchmarine.com
HAMPSHIRE	Marine Power Ltd	0238 0403918	info@marine-power.co.uk
HEREFORDSHIRE	Starline Marine	01684 593443	narrowboats@starline.demon.co.uk
HERTFORDSHIRE	P & S Marine	01923 248372	pandsmarinellp@gmail.com
LEICESTERSHIRE	Foxton Boat Services Ltd	01162 792285	tony@foxton-boats.freeserve.co.uk
NORFOLK	French Marine Motors Ltd	01603 722079	info@frenchmarine.com
NORTHAMPTON	Grand Junction Boat Co.	01604 858043	grandjunco@talk21.com
NOTTINGHAM	Farndon Marina	01636 705483	info@farndonmarina.co.uk
OXFORDSHIRE	Service Engine UK	01993 835157	info@serviceenginesuk.co.uk
SHROPSHIRE	Maestermyn (Marine) Ltd	01691 662424	enquiries@maestermyn.co.uk

STAFFORDSHIRE	JD Boat Services Ltd	01902 791811	jdboats@btinternet.com
	Stone Boatbuilding Company	01785 812688	sales@stonebuilding.co.uk
	Streethay Wharf	01543 414808	office@streethaywharf.co.uk
WARWICKSHIRE	Barry Hawkins Narrowboats	01827 711762	boats@hawkinsyard.freeserve.co.uk
	Onboard Energy	02476 393333	sales@onboardenergy.com
	Springwood Haven Leisure Ltd	0845 4566572	enquiries@springwoodhaven.co.uk
	Valley Boat Services Ltd	07990528123	enquiries@valleycruises.co.uk
WEST MIDLANDS	Stephen Goldsbrough Boats	01564 778210	andy@sgboats.com
WILTSHIRE	Foxhangers Marine	01380 828795	info@foxhangers.co.uk
WORCESTERSHIRE	J L Pinder & Son	01527 876438	sales@jlpinderandsons.co.uk
	Starline Narrowboats	01684 874774	narrowboats@starline.demon.co.uk
YORKSHIRE	Rodley Boat Centre	01132 576132	John.snowdenz@ntlworld.com
MONMOUTHSHIRE	Castle Narrowboats	01873 830001	castlenarrowboats@btinternet.com
SHETLAND	DH Marine (Shetland) Ltd	01595 690618	mail@dhmarine.co.uk
NORTHERN IRELAND	South Shore Marine	020 38341010	info@southshoremarine.co.uk
EIRE	Dun Laoghaire Marine Services	00353 12104776	info@dlms.ie
	O'Sullivans Marine	003536 67124524	brian@sulliansmarine.com
	Oysterhaven Boats	00353 214843626	sales@oysterhavenboats.com

SECTION 11 – Shire Parts

Model	15	20	25	30 M	30
Primary Fuel Filter	RDG906A3	RDG906A3	RDG906A3	RDG906A3	RDG906A3
Oil Filter	119305-35151	119305-35151	119305-35151	119305-35151	119305-35151
Secondary Filter	104500-55710	104500-55710	104500-55710	104500-55710	104500-55710
Zinc Anti Corrosive Anode	-	-	-	-	RDG504A70
Zinc Sticker	-	-	-	-	124220-09346
Water Pump End Plate	RDG501A28	RDG501A28	RDG501A28	RDG501A28	RDG501A28
Water Pump PTFE Lid Spacer	RDG001A4	RDG001A4	RDG001A4	RDG001A4	RDG001A4
Water Pump PTFE Disc	RDG001A3	RDG001A3	RDG001A3	RDG001A3	RDG001A3
Sea Water Pump Impellor	RDG010A7	RDG010A7	RDG010A7	RDG010A7	RDG010A7
Sea Water Pump O Ring	X02173476	X02173476	X02173476	X02173476	X02173476
120A Alternator Belt	128790-77580	128790-77580	128990-77580	128990-77580	128990-77580
Sea Water Pump Belt	104511-78780E	104511-78780E	25111-002100	25111-002100	25111-002100

Control Panel:

Control Panel	Part Number
Shire YM WB Basic Panel	RDG207A209
Shire YM WB Standard Panel	RDG207A207
Shire YM WB Deluxe Panel*	RDG207A208

***** Not available on a Shire 15 Work Boat YM

Engine Oil:

Engine Oil is available from your Shire Dealer in convenient 5 litre containers (Part Number RDG6110).

Diesel Fuel Additive:

Diesel fuel additive is available from your Shire Dealer in a handy 500ml container (Part No

RDG80210219).

Front Power Take Stub Shaft Option:
If a front power take stub shaft is required, the part number RDG912A30 can be ordered as an option

The stub shaft has a 32mm diameter. The key way slot is 10mm wide with a 5mm depth.

3.3kW (4.4hp) at 3000rpm is the maximum power that can be taken from the front power take stub shaft. The maximum overhang is 50mm.

Crank Driven Water Pump Option (SS1716):
If a crank driven pump is required, the part number RDG9079564 and the relevant fitting kit can be ordered as an option. Please be aware that the front power take Stub option cannot be fitted to the engine if the crank driven water pump option is fitted.

SERVICE RECORD CARD

Model: .....

Engine No: .....

Carried out by E.P.Barrus **Print Name:** PDI **Actual Hours:** **Signed:**	**Boat Builder Stamp:** **Commission of Boat and Hand Over to Customer.** **Date:** **Signed:**
Dealer Stamp: 1st **Actual Hours:** **Signed:**	**Dealer Stamp:** 2nd **Actual Hours:** **Signed:**
Dealer Stamp: 3rd **Actual Hours:** **Signed:**	**Dealer Stamp:** 4th **Actual Hours:** **Signed:**
Dealer Stamp: 5th **Actual Hours:** **Signed:**	**Dealer Stamp:** 6th **Actual Hours:** **Signed:**

Please refer to Owner's Manual for service intervals